


## IPHONE6 CRADLE/ACOUSTIC AMP

Magazine Rack Plan ©2015 DIY-Modern.com All Rights Reserved. Resale prohibited.

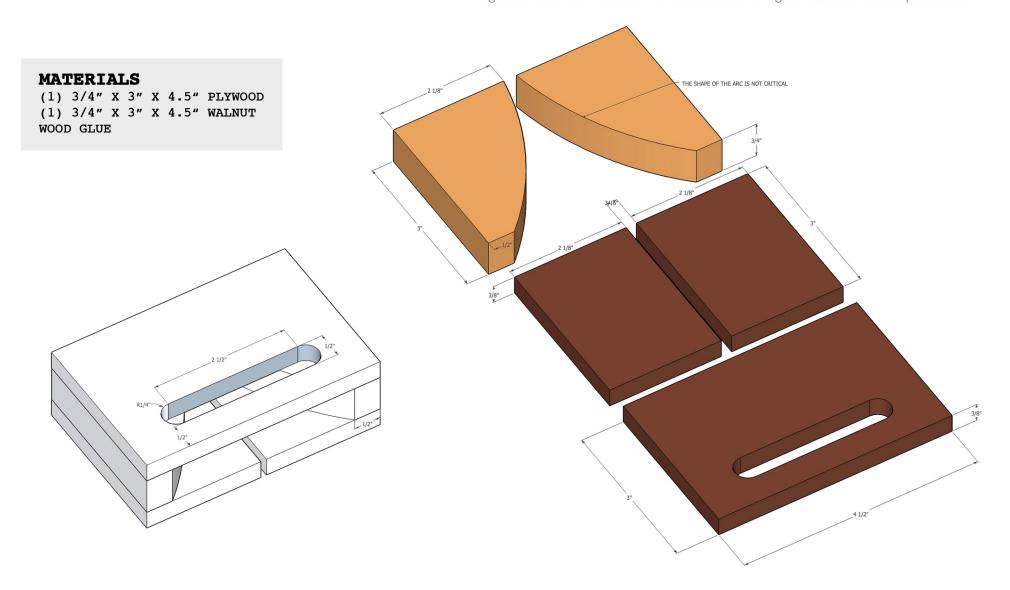

## NOTE:

Use a drill bit that is slightly larger than the thickness of your phone. This plan utilizes a 1/2" drill bit for the slot. The reference phone thickness with case is 3/8", so the slot is 1/8" deeper than the phone in the case, allowing the phone to tilt back in the slot.